



E Series battery locks

Instructions for tamper resistant battery compartment on the IFES61/71/981/91 models.


Insert the right/left indicator into the hearing aid.

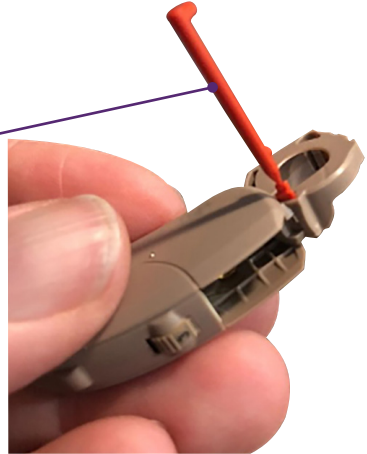

When the round indent is to the left (default) the battery drawer is unlocked.

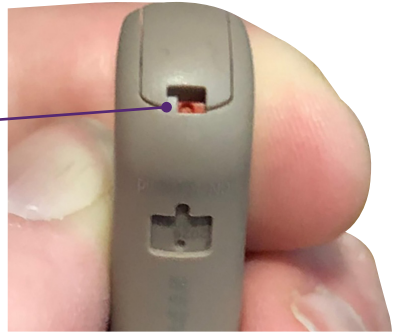

Using the battery lock tool which comes with the hearing aid, slide the indent to the right to lock the battery drawer.

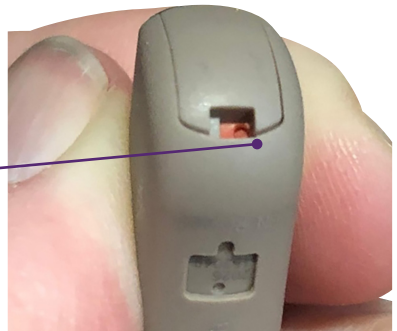

Audiologist contact details: